 


# **Xerox Multifunction Black-and-White Printer WorkCentre 5150**



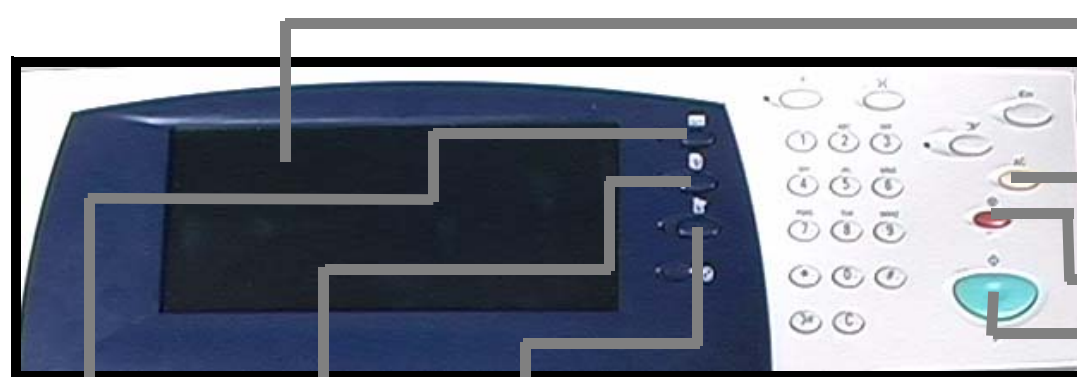

**TOUCH SCREEN** - Displays all the available features and general machine information

**CLEAR ALL** - Resets features to their default settings

**PAUSE** - Interrupts current job

**START** - Starts the job



**MACHINE STATUS:** Displays machine information



**JOB STATUS:** Displays the job queue information



**FEATURES:** Displays the job features on the screen

Features\* are accessible by touching the tabs or All Services,  for example:

\*Some features may not be available on your model.

## LOAD PAPER

## FAX

## E-MAIL

## COPY

### LOAD PAPER

- Open the required paper tray.
- Load the paper, do not load above the maximum fill line.
- Adjust the guides to touch the edge of the paper.
- Close the paper tray, except the Bypass Tray.
- Confirm the paper size/type settings on the user interface.

### QUICK FAX

- Load the original face up in the document handler.
- Touch the FAX or INTERNET FAX tab.
- Touch the screen buttons to make feature selections.
- Enter the receiving fax number using the keypad or select an e-mail address from the ADDRESS BOOK.
- Press START.

### QUICK E-MAIL

 
- Load the original face up in the document handler.
- Touch the E-MAIL tab.
- Touch the screen buttons to make feature selections.
- Make a selection from the ADDRESS BOOK.
- Press START.

### QUICK COPY

- Load the original face up in the document handler.
- Touch the COPY tab.
- Touch the screen buttons to make feature selections.
- Press START.

## How to make a Copy


### 1. PREPARATION

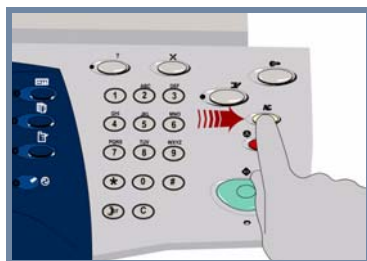

**Cancel** any selections made by a previous user by pressing the **AC (Clear All)** button.


**Remove any staples and paper clips** from your documents and ensure that the documents are in good condition.

### 2. LOAD THE DOCUMENTS

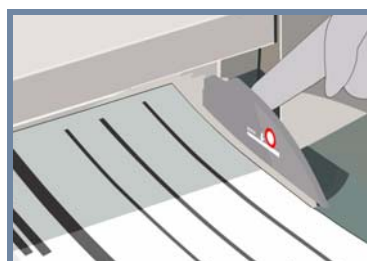 

**Place** the documents in the Document Handler in order (1,2,3...) with page 1 face up on top.

 **Slide** the document guides against the front and rear edges of the documents.

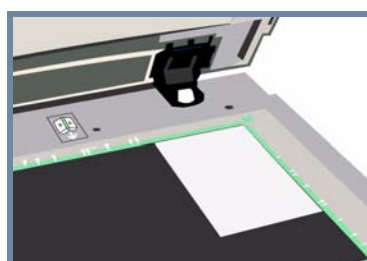


**OR**

**Place** the document face down on the Document Glass and register it to the rear right corner.


### 3. MAKE COPIES
 
#### Features Button

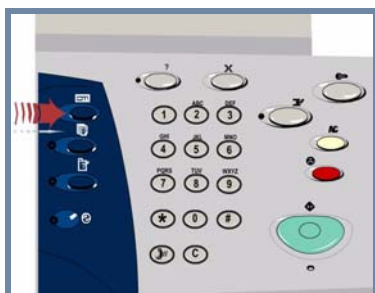

Press the **Features** button to display the features selection screen.

#### All Services Button

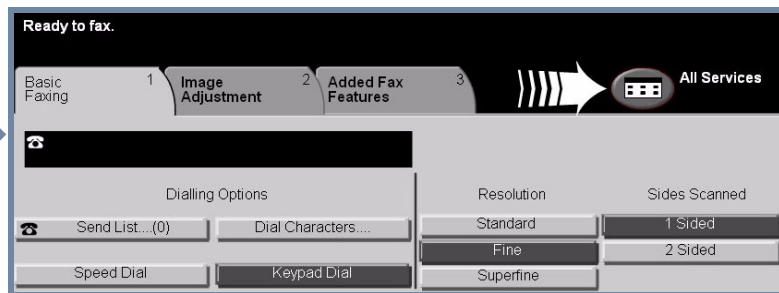 

Select the **All Services** button **OR** the **Basic Copying** tab.


#### Basic Copying Button



 Select the **Copy** button. If you cannot see the Copy button, select the **More Service** button first.




#### Quantity of Copies

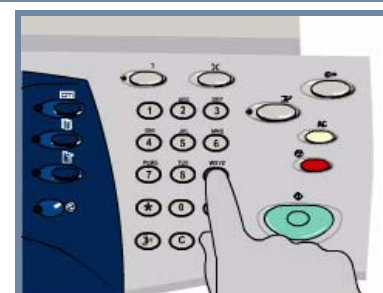

Use the **numeric keypad** to enter the quantity of copies to be made.

### 4. START THE JOB

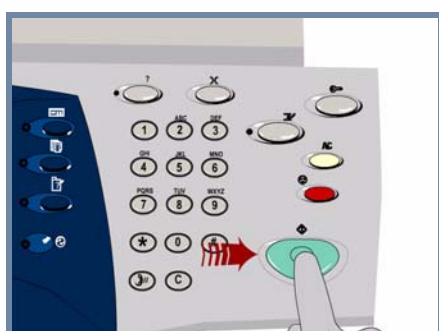 

**Press the Start** button to start your job.

That completes the procedure.

### MORE INFORMATION

 
For more information, please refer to:

- **Interactive User Guide CD 2**
- **Quick Use Guide**
- <http://www.xerox.com/support>



How to Scan to E-mail


1. PREPARATION

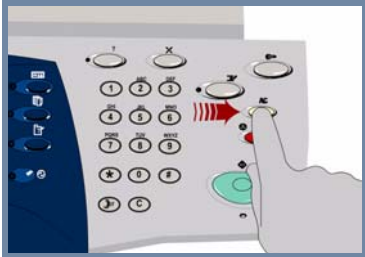

**Cancel** any selections made by a previous user by pressing the **AC (Clear All)** button.



**Remove any staples and paper clips** from your documents and ensure that the documents are in good condition.

 2. LOAD THE DOCUMENTS

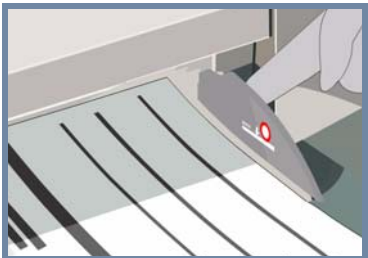

**Place** the documents in the Document Handler in order (1,2,3...) with page 1 face up on top.

  **Slide** the document guides against the front and rear edges of the documents.

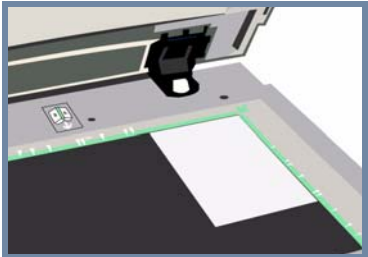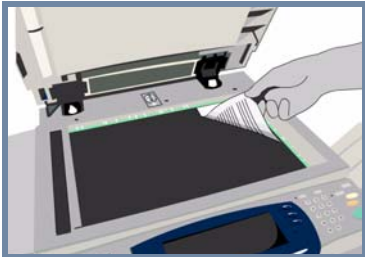


**OR**

**Place** the document face down on the Document Glass and register it to the rear right corner.


3. SELECT E-MAIL RECIPIENTS

 Features Button

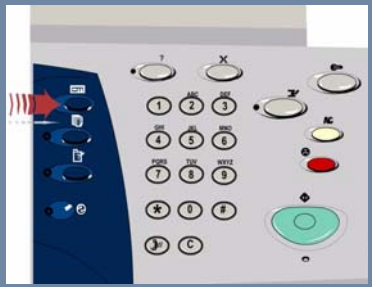


Press the **Features** button to display the features selection screen.

 All Services Button

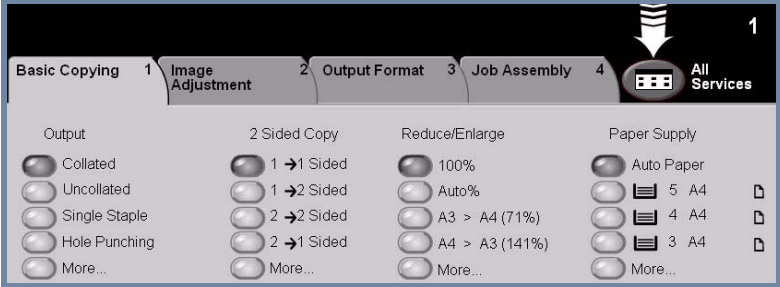

Select the **All Services** button **OR** the **E-mail** tab.

 
E-mail Button

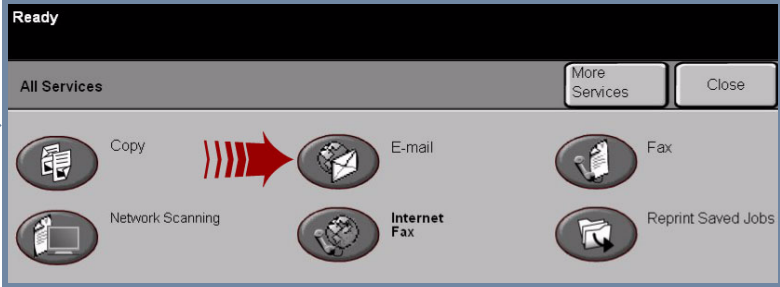

Select the **E-mail** button. If you cannot see the E-mail button, select the **More Service** button first.




 E-mail Address

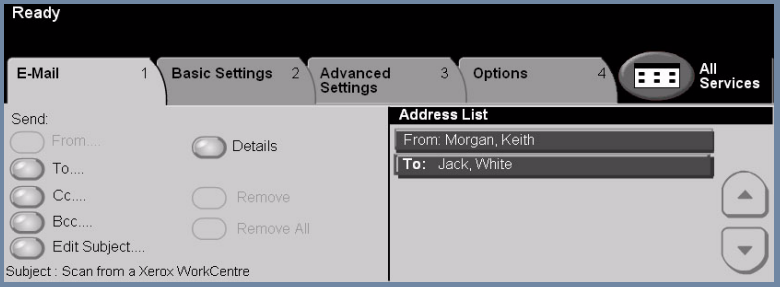

Select **To:** in the send field and either input the **full E-mail address** **OR** use the **address book** to select a recipient.

 4. SEND THE E-MAIL

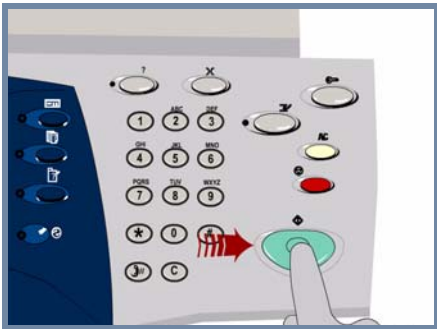

**Press the Start** button to start your job.


That completes the procedure.

MORE INFORMATION

- For more information, please refer to:
- **Interactive User Guide CD 2**
  - **Quick Use Guide**
  - <http://www.xerox.com/support>

## How to send a Fax (Embedded)
 
### 1. PREPARATION

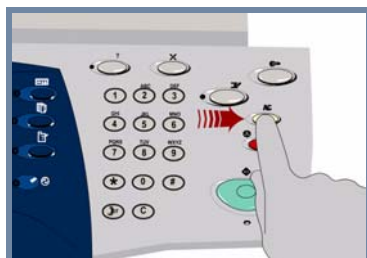

**Cancel** any selections made by a previous user by pressing the **AC (Clear All)** button.


**Remove any staples and paper clips** from your documents and ensure that the documents are in good condition.

### 2. LOAD THE DOCUMENTS



 **Place** the documents in the Document Handler in order (1,2,3...) with page 1 face up on top.

**Slide** the document guides against the front and rear edges of the documents.

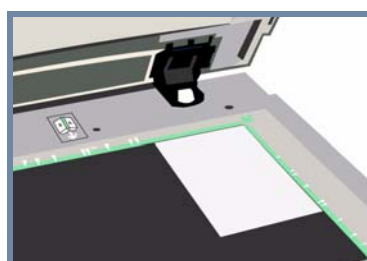


**OR**

**Place** the document face down on the Document Glass and register it to the rear right corner.


### 3. ENTER FAX OPTIONS
 
#### Features Button

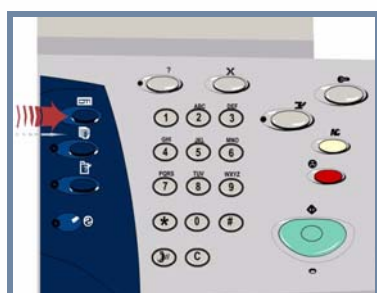

Press the **Features** button to display the features selection screen.

#### All Services Button

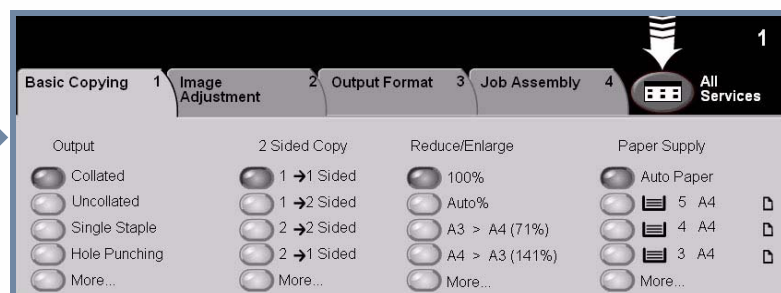 

Select the **All Services** button **OR** the **Basic Faxing** tab.


#### Fax Button



 Select the **Fax** button. If you cannot see the Fax button, select the **More Service** button first.




#### Fax Number

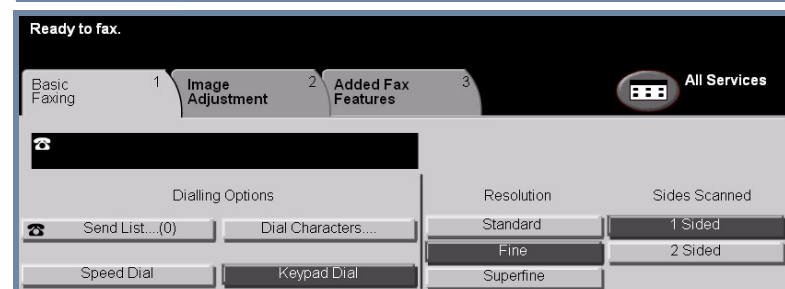

Use the **numeric keypad** to enter the recipient's fax number **OR** use the send list to select a previously stored number.

### 4. TRANSMIT THE FAX

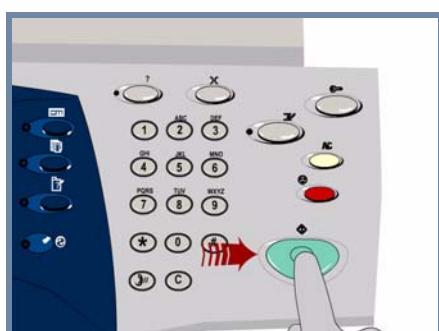 

**Press the Start** button to start your job.

That completes the procedure.

### MORE INFORMATION

For more information, please refer to:

- **Interactive User Guide CD 2**
- **Quick Use Guide**
- <http://www.xerox.com/support>