

Xerox Multifunction Color Printer WorkCentre 7535



Xerox® WorkCentre® 7500 Series

Quick Copying Guide

- 1. Touch Screen:** Provides access to printer information and functions.
- 2. Services Home:** Press to access the main services, such as copy, scan, and fax.
- 3. Services:** Press to access Services Home or the last used screen.
- 4. Job Status:** Press to view the list of active and completed jobs.
- 5. Machine Status:** Press to view supplies status, printer information, and so on.
- 6. Log In/Out:** Press to access password-protected features, then enter the user name and password using the touch screen keyboard. Press again to log out.
- 7. Help:** Press for information about the current selection or service.
- 8. Language:** Press to change the touch screen language and keyboard settings.
- 9. Energy Saver:** When printer is in low power mode, press to enter normal mode. Press while the printer is in normal mode to enter low power mode.

 


- 10. Start:** Press to start a copy, scan, or fax job.
- 11. Stop:** Press to pause a print, copy, scan, or fax job. On the touch screen, touch **Resume** to continue or **Delete** to cancel the job.
- 12. Clear All:** Press once to clear current job settings. Press twice and touch confirm to reset all job settings to default.
- 13. Interrupt Printing:** Press to hold the current job to allow a priority job to process. Press again to finish the interrupted job.
- 14. Alphanumeric Keys:** Press to enter alphanumeric information.
- 15. C:** Press to delete numeric values or the last digit entered using the alphanumeric keys.
- 16. Dial Pause:** Press to insert a pause in a fax number.

Basic Copying

- Place the originals face up in the document feeder, or face down on the glass.
- Press **Services Home** on the control panel, then touch **Copy** on the touch screen.
- Confirm or change Copy tab options as desired, such as Output Color, and Paper Supply. Also touch other tabs for more options.
- Select the number of copies with the alphanumeric keys.
- Press the green **Start** button.

For more information, see *Copying* in the *User Guide*.

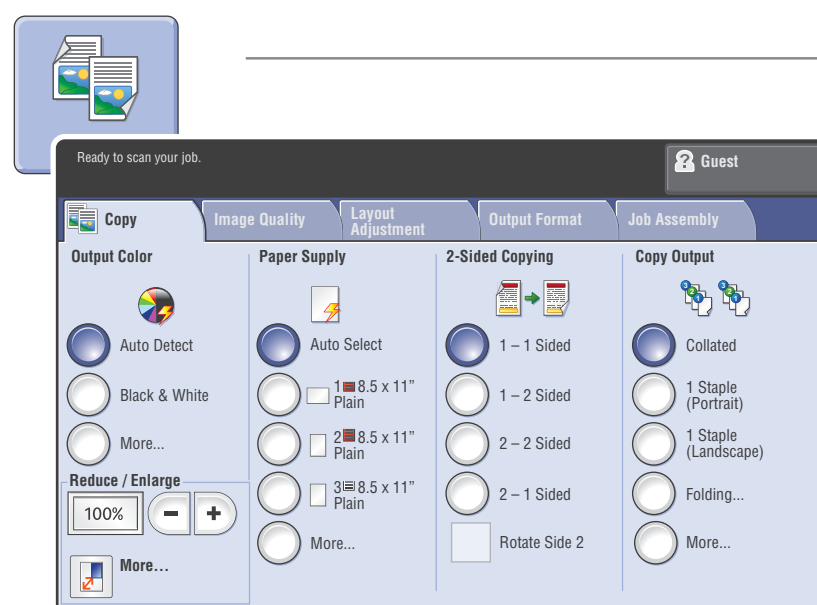

Copy Tab Options

Output Color

- **Auto Detect** allows the printer to detect and copy in color or black and white.
- **Black & White** copies in black and white only.
- Touch **More** for more options.

Reduce/Enlarge

- Touch the **minus** (–) or **plus** (+) button to change the copy size proportionally.
- Touch **More** for more options.

Paper Supply

- **Auto Select** allows the printer to select trays with the correct paper size.
- Touch one of the trays displayed to select a tray manually.
- Touch **More** for more information about tray settings.

2-Sided Copying

- Touch one of the listed options to copy one or two sides of the original to one or two sides of the output.
- Touch **Rotate Side 2** to rotate the second side of copies 180 degrees.

Copy Output

- Touch the desired options for collation and stapling. The list will vary depending on the finisher configuration.
- Touch **More** for more options.

Other Tab Options

Image Quality

- Original Type
- Image Options
- Image Enhancement
- Color Presets
- Color Balance

Layout Adjustment

- Original Orientation
- Original Size
- Book Copying
- Image Shift
- Edge Erase
- Invert Image

Output Format

- Booklet Creation
- Special Pages
- Annotations
- Transparency Separators
- Page Layout

Job Assembly

- Build Job
- Sample Job
- Save Current Settings
- Retrieve Saved Settings

Xerox® WorkCentre® 7500 Series

Quick Email Guide

 
- 1. Touch Screen:** Provides access to printer information and functions.
- 2. Services Home:** Press to access the main services, such as copy, scan, and fax.
- 3. Services:** Press to access Services Home or the last used screen.
- 4. Job Status:** Press to view the list of active and completed jobs.
- 5. Machine Status:** Press to view supplies status, printer information, and so on.
- 6. Log In/Out:** Press to access password-protected features, then enter the user name and password using the touch screen keyboard. Press again to log out.
- 7. Help:** Press for information about the current selection or service.
- 8. Language:** Press to change the touch screen language and keyboard settings.
- 9. Energy Saver:** When printer is in low power mode, press to enter normal mode. Press while the printer is in normal mode to enter low power mode.



- 10. Start:** Press to start a copy, scan, or fax job.
- 11. Stop:** Press to pause a print, copy, scan, or fax job. On the touch screen, touch **Resume** to continue or **Delete** to cancel the job.
- 12. Clear All:** Press once to clear current job settings. Press twice and touch confirm to reset all job settings to default.
- 13. Interrupt Printing:** Press to hold the current job to allow a priority job to process. Press again to finish the interrupted job.
- 14. Alphanumeric Keys:** Press to enter alphanumeric information.
- 15. C:** Press to delete numeric values or the last digit entered using the alphanumeric keys.
- 16. Dial Pause:** Press to insert a pause in a fax number.

Basic E-mailing

- Place the originals face up in the document feeder, or face down on the glass.
- Press **Services Home** on the control panel, then touch **E-mail** on the touch screen.
- Specify the recipient using one of these methods:
 - Touch **New Recipient**, then enter the complete email address using the touch screen keyboard.
 - Touch **Address Book**, type the desired recipient, then touch **Search**. Touch **Add**, then touch **Close**.
- Touch **Subject** to change the subject line as desired.
- Confirm or change Email tab options such as Output Color and Original Type. Also touch other tabs for more options.
- Press the green **Start** button.

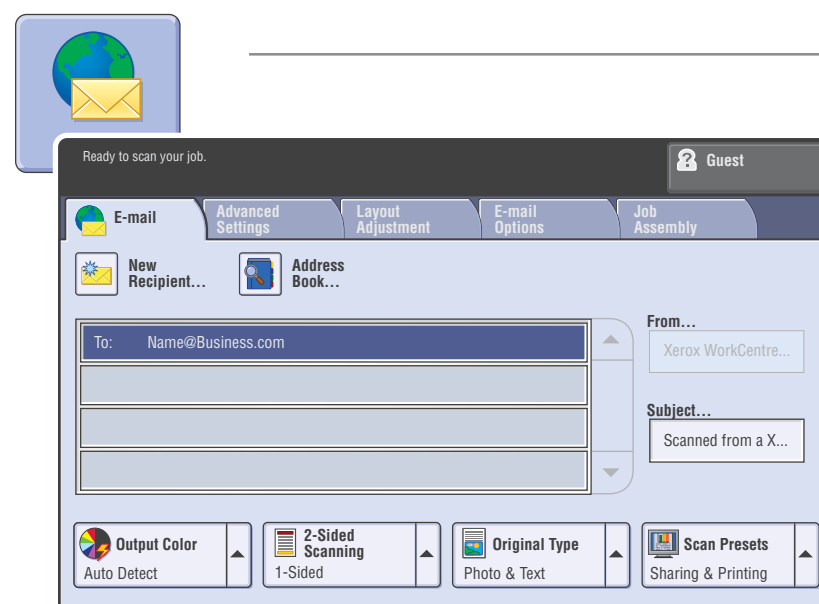

Email and Email Options Tabs

Email

- Output Color:** Select Auto Detect, Black & White (100 % black and 100 % white only), Grayscale, or Color.
- 2-Sided Scanning:** Select 1-Sided, 2-Sided, or 2-Sided, rotate Side 2.
- Original Type:** Select Photo & Text, Photo, Text, Map, or Newspaper/Magazine.
- Scan Presets:** Select Sharing & Printing, Archival – Small file Size, OCR, High Quality Printing, or Simple Scan. Touch **View Details** for descriptions of Scan Presets.

Email Options

- File Name:** Change the file name of the scan.
- File Format:** Select PDF, PDF/A, XPS, Multi-Page TIFF, TIFF (1 File per Page), or JPEG (1 File per Page). PDF, PDF/A, and XPS Options are Image Only or Searchable, which works with optical character recognition (OCR).
- Message:** Add a message to the email.
- Reply To:** Change the Reply To address of the email.

Other Tab Options

Advanced Settings

- Image Options
- Image Enhancement
- Resolution
- Quality/File Size

Layout Adjustment

- Original Orientation
- Original Size
- Edge Erase

Job Assembly

- Build Job

Xerox® WorkCentre® 7500 Series

Quick Faxing Guide

- 1. Touch Screen:** Provides access to printer information and functions.
- 2. Services Home:** Press to access the main services, such as copy, scan, and fax.
- 3. Services:** Press to access Services Home or the last used screen.
- 4. Job Status:** Press to view the list of active and completed jobs.
- 5. Machine Status:** Press to view supplies status, printer information, and so on.
- 6. Log In/Out:** Press to access password-protected features, then enter the user name and password using the touch screen keyboard. Press again to log out.
- 7. Help:** Press for information about the current selection or service.
- 8. Language:** Press to change the touch screen language and keyboard settings.
- 9. Energy Saver:** When printer is in low power mode, press to enter normal mode. Press while the printer is in normal mode to enter low power mode.

 


- 10. Start:** Press to start a copy, scan, or fax job.
- 11. Stop:** Press to pause a print, copy, scan, or fax job. On the touch screen, touch **Resume** to continue or **Delete** to cancel the job.
- 12. Clear All:** Press once to clear current job settings. Press twice and touch confirm to reset all job settings to default.
- 13. Interrupt Printing:** Press to hold the current job to allow a priority job to process. Press again to finish the interrupted job.
- 14. Alphanumeric Keys:** Press to enter alphanumeric information.
- 15. C:** Press to delete numeric values or the last digit entered using the alphanumeric keys.
- 16. Dial Pause:** Press to insert a pause in a fax number.

Basic Faxing

- Place the originals face up in the document feeder, or face down on the glass.
- Press **Services Home** on the control panel, then touch **Fax** on the touch screen.
- Enter a fax number using the alphanumeric keypad, or touch **Dialing Characters** to enter numbers using the touch screen keypad, then touch **Add**.
Touch **Address Book** to enter stored numbers. Touch **Individual** or **Group** from the drop-down list. Touch the arrows to scroll through the list, touch the desired contact, then touch **Add to Recipients**. Touch **Close**.
- Touch **Cover Sheet** to include additional information with the fax.
- Confirm or change Fax tab options as desired, such as 2-Sided Scanning and Original Type. Also touch other tabs for more options.
- Press the green **Start** button.

For more information, see *Faxing* in the *User Guide*.

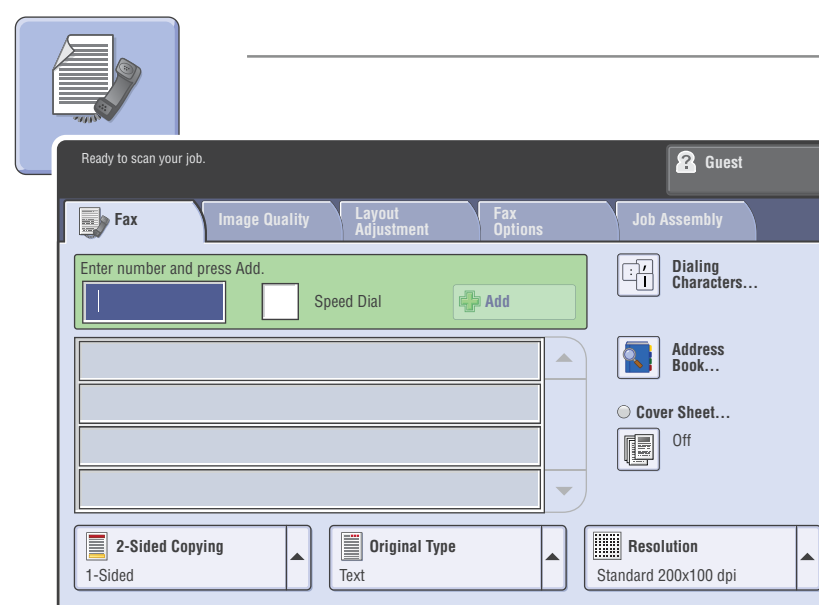

Fax Tab Options

- **2-Sided Scanning:** Select 1-Sided, 2-Sided, or 2-Sided, rotate Side 2.
- **Original Type:** Select Photo & Text, Photo, Text, Map, or Newspaper/Magazine.
- **Resolution:** Select Standard 200x100 dpi, Fine 200 dpi, or Super Fine 600 dpi.
- **Dialing Characters:** Insert characters such as a dial pause in fax numbers.
- **Address Book:** Select stored Individual and Group fax numbers.
- **Cover Sheet:** Add a cover sheet, and include information such as To, From, and additional comments.

Other Tab Options

Image Quality

- Image Options
- Image Enhancement

Layout Adjustment

- Original Size
- Reduce/Split
- Book Faxing

Fax Options

- Confirmation Report
- Starting Rate
- Delay Send
- Send Header Text
- Mailboxes
- Local Polling
- Remote Polling

Job Assembly

- Build Job