HIGH RISE FIRE SAFETY


1100 Broadway UCOP Staff

- In the emergence of a need to evacuate the building we must know three things.
- 1. Where you are at.
- 2. Where are you going.
- 3. How to get there.

REQUIRED KNOWLEDGE

- While there are many other factors related to the safe evacuation of building occupants which are covered in the tenant handbook. Here we are discussing the basic familiarity and egress routes of our new facility.
- ▶ 1100 Broadway has two sets of stairs for evacuation, #'s 1 and 2.
- Stair #1 is on the 12th Street side of the building while stair #2 is on the 11th Street side of the building.
- Either stair set will provide facility egress. Familiarize yourself with BOTH sets of stairs. (note that the stairs go all the way to the basement level but there is a barricade preventing accidental entry to the basement level, while at the Franklin building there was no option for continuing to the basement)

1100 BROADWAY DESIGN

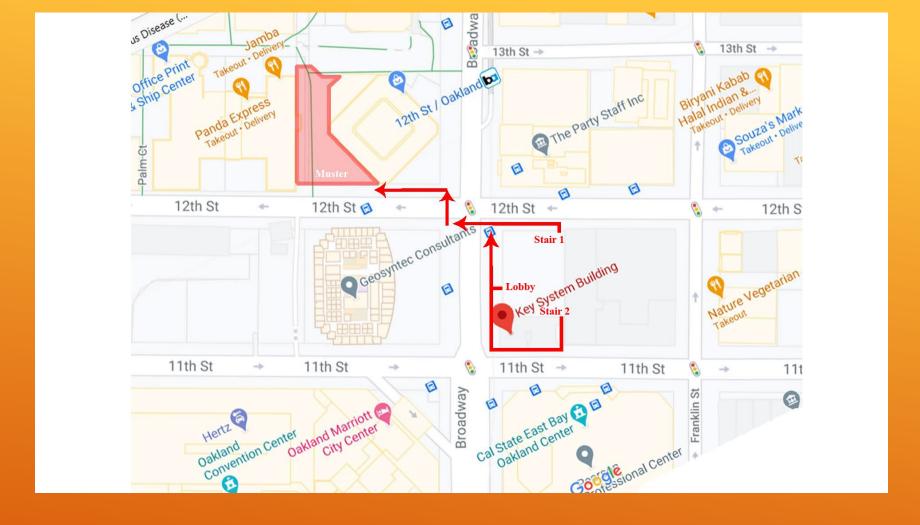

FACILITY LOCATION, EGRESS ROUTE AND ASSEMBLY AREA.

Once your floor warden, engineer or security agent has notified you of the ALL CLEAR, repopulation of the facility may begin.

We will repopulate from the highest floor first and the lowest floor last to prevent too much of a surge all at once.

REPOPULATING AFTER EVENT




Smoke detector



Notification device aka, speaker strobe.



Fire suppression sprinkler head

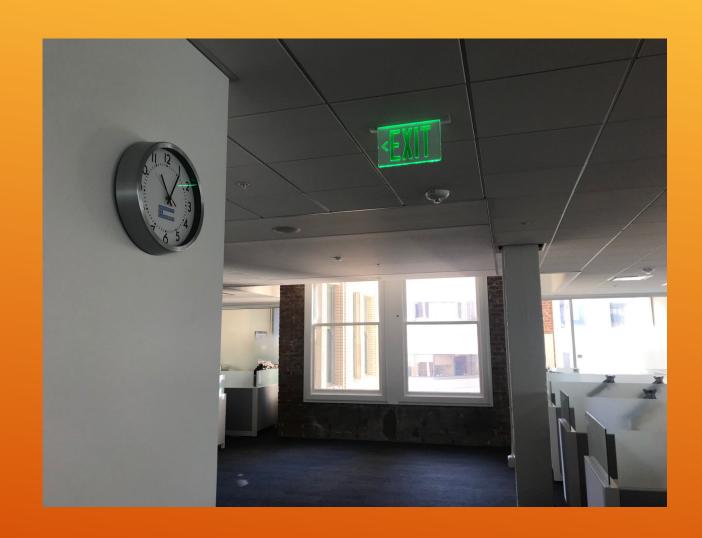

Exit path signage and speaker strobe nearby.





These two overhead devices are not related to fire safety but I am listing them for general awareness.

WAP (wireless access point for WiFi)

Motion sensor for lighting

- Identify floor wardens
- > Where no floor warden is known we will need a recruit.
- ► Email Tim Dowing, or Darryl R. Brown to volunteer.
 - ➤ Tim Dowing, timothy.dowing@ucop.edu/
 - Darryl R. Brown, <u>darryl.brown@ucop.edu</u>

FLOOR WARDEN RECUITMENT